



NOVA LUCE

9063609, 9063610
9063611, 9063612

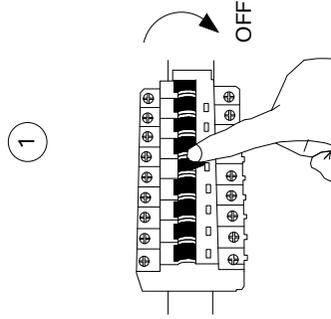


1

Turn off the general switch



2


Drill holes with D: 0.6 cm

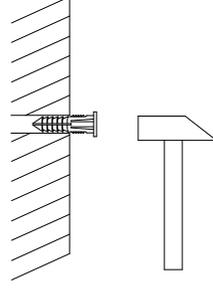

3


Apply plastic anchors

4

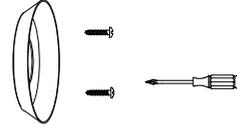


Apply screws
With a screwdriver

5

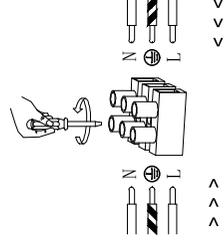


Connect the wires

6

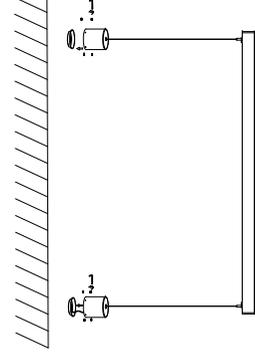

Apply the side screws

7

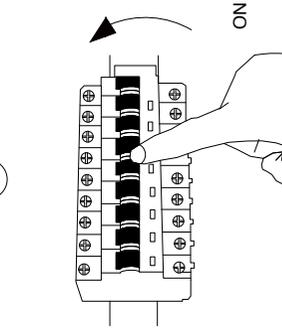

Turn on the general switch

