



NOVA LUCE


9186718
Part 1

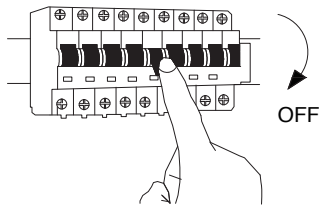


1. Turn off the general switch

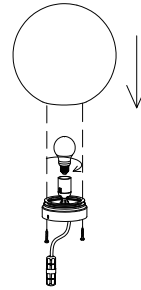


2. By rotating, break it apart

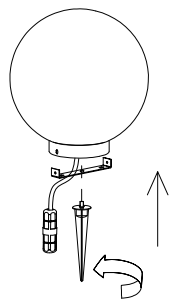


3. Align, mark and drill holes
To apply the screws

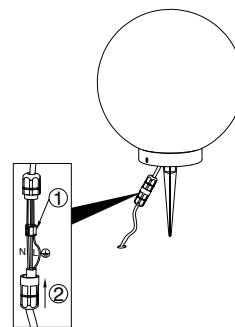


4. Connect the wires

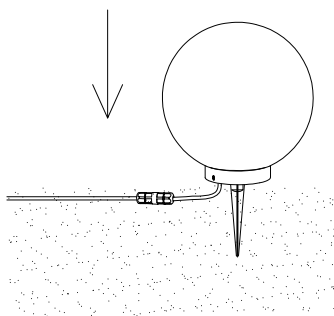


5. Apply the Side screws

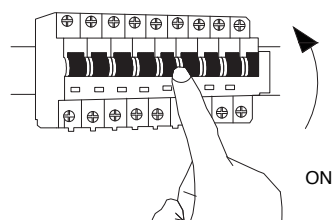


7. Turn on the general switch

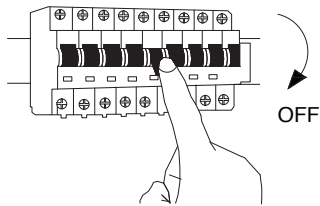


1. Turn off the general switch

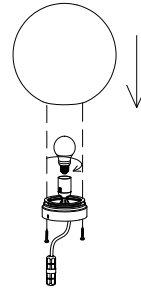


2. By rotating, break it apart

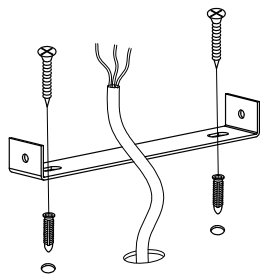

3. Align, mark and drill holes
To apply the screws

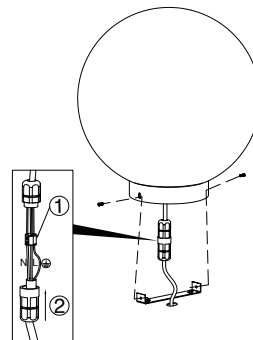

4. Connect the wires

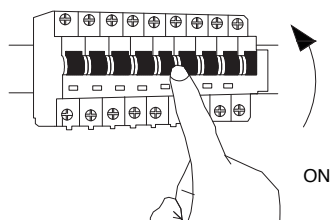

7. Turn on the general switch